



### 3-Lever Remote Controlled Light Dimmer



Add security and comfort to your lifestyle

### 3-Lever Remote Controlled Light Dimmer

- Use with any ClickOn Remote Control or wallbox transmitter to control lights from up to 30m away
- May be used without a remote control
- Replaces any standard 3-lever wall switch
- Use with 220V halogen or incandescent lights
- Rated up to 300W per Lever
- No additional wiring required
- Soft start feature increases the lifetime of globes

© 2000 ClickOn Technology (Pty) Ltd.  
<http://www.clickon.co.za>

### INSTALLATION INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY. IN CASE OF ANY UNCERTAINTY REGARDING THE INSTALLATION, PLEASE CONSULT A QUALIFIED ELECTRICIAN

- Switch off the main supply at the distribution panel before removing the existing switch unit
- Refer to the appropriate wiring diagram on the overleaf and connect the light dimmer as indicated
- Ensure the light dimmer is earthed by connecting the earth connection terminal on the unit to the earth wire in the wall box
- Install the dimmer unit into the wall box and mount the supplied cover plate into position before switching on the main supply

#### WARNING

- The light dimmer is designed for 220V halogen and incandescent lamps ONLY
- Do not connect to a fluorescent lamp
- Do not connect to low voltage lighting
- The Light Dimmer must be used with a ClickOn Wallbox Transmitter for multi-way switch applications
- Adhere to the rated specification of the unit
- To calculate the total load on a specific lever, add all lamp wattages connected to that particular lever:

#### EXAMPLE

2 LAMPS OF 100W = 200W  
4 LAMPS OF 40W = 160W


### SPECIFICATIONS

SUPPLY VOLTAGE	220-240VAC, 50HZ
MINIMUM LOAD	40W PER LEVER
MAXIMUM LOAD	300W PER LEVER

### OPERATING INSTRUCTIONS


Without a Remote Control

To switch a light ON or OFF

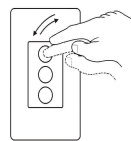


Press and Release the appropriate button

To change the light intensity

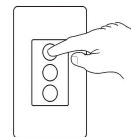

Press and hold the appropriate button

To RESTORE to a previous level of light intensity when the light is switched off

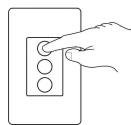


Press and hold the appropriate button. Release the button when the light turns on


### PROGRAMMING A REMOTE CONTROL INTO A CLICKON LIGHT DIMMER

Please refer to your Remote Control booklet for detailed programming instructions

Example

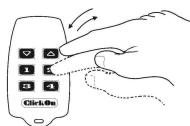

Select a channel of your choice on the remote control by pressing and releasing a channel key

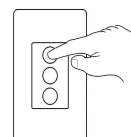

Press and hold the dimmer button until the light flashes  
**DO NOT RELEASE THE BUTTON**





While **keeping the button on the light dimmer pressed in**, press and hold the UP button on the remote control until the remote sounds 3 beeps and the light flashes again





Release both buttons

EZE-SW-101

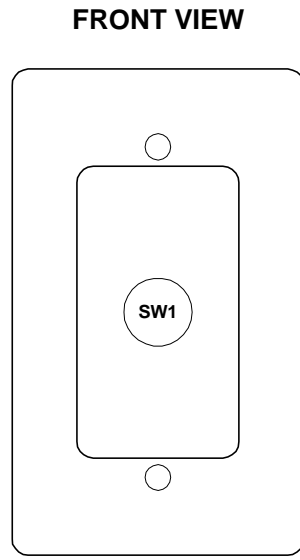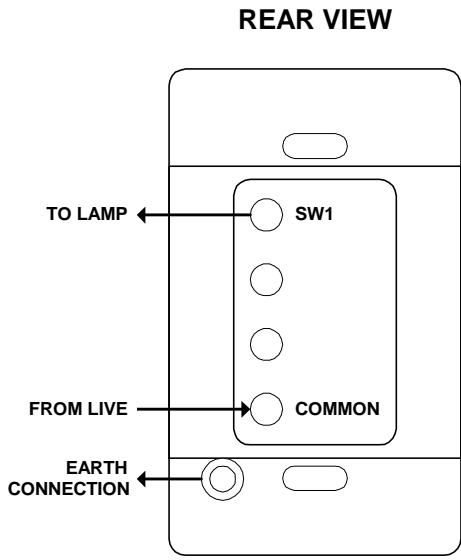



1-LEVER

EZE-SW-102

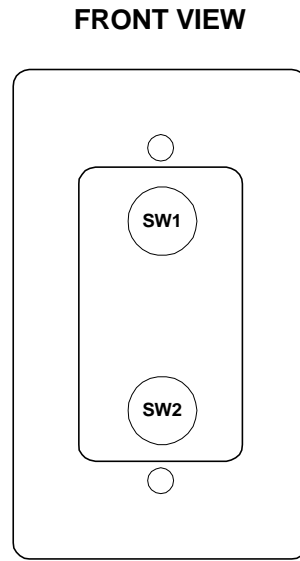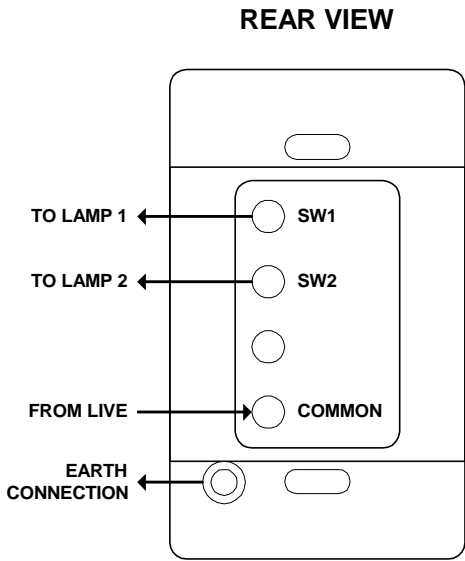

2-LEVER

EZE-SW-103

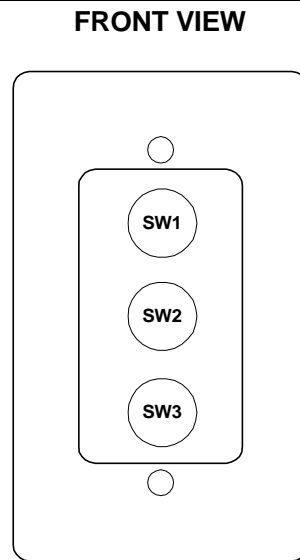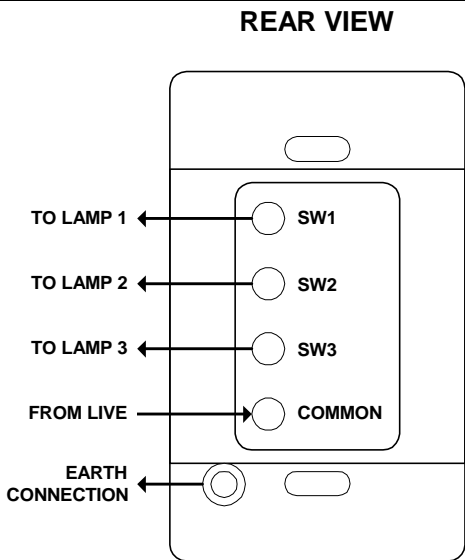

3-LEVER