

ClickOn



 

Remote Controlled Plug Point

For remote control of any appliances for example kettles, televisions, table lamps etc. when used with any ClickOn Remote Control or Remote Commander.

FEATURES

- Easy programming procedure
- Up to 30m Range
- Power failure memory
- Override button for on/off switching without the remote control
- 24 Channel memory

SPECIFICATIONS

- Model CL-PLUG-10
- Supply 220-240V~ 50Hz
- Maximum Loads at 230V~:
 -  General purpose resistive: 2000W (8.7A)
 -  Motor: 2.7HP (2000W)
 -  Ballast (Fluorescent lights): 2000W
 -  Low Voltage Transformer: 2000W
- Ingress Protection: IP20

MANUAL OPERATION

Press and release the button on the front of the unit to toggle the output between ON and OFF.

The LED indicates the current status of the unit as follows:

GREEN: Output OFF

RED: Output ON

AMBER: Program mode active

REMOTE CONTROL OPERATION


The Plug Point can store up to 24 different Remote Control channels from any ClickOn remote control. Both Code Hopping and Fixed Code Channels may be programmed into the Plug Point, as long as the collective amount does not exceed 24 channels.

See reverse for programming instructions.

WARRANTY


The manufacturer warrants that the product identified in this manual is free from defects in material or workmanship. This warranty is valid for a period of 12 months from date of purchase. The manufacturer, at its discretion, will repair or replace the defective product when returned to the manufacturer via the retailer of the system. In the event that no satisfaction can be obtained from the retailer of the system, only then can the manufacturer be approached directly by the final purchaser. The manufacturer shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of the use of the product. Improper use or mishandling of this product by the purchaser will render this warranty null and void. No warranty claims will be entertained without presentation of a valid invoice. The manufacturer will charge the purchaser for services rendered outside the warranty period. Any implied warranties in respect of this product are expressly excluded. No agreement whether implied or referred are binding, unless agreed to in writing by the manufacturer.

PROGRAMMING A REMOTE CONTROL DEVICE INTO THE PLUG POINT

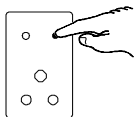

Place the plug into the **programming mode** by pressing and holding the plug point button until the LED indicator starts flashing constantly. **Release the button.**

FOR A 64 CHANNEL REMOTE CONTROL:

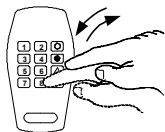

Select a channel of your choice on the remote control by pressing and releasing a channel key.



Press and hold the **ON** button on the remote control until the remote sounds **3 beeps** and the plug point LED flashes rapidly.



Release the remote control button and press and release the plug point button to exit the program mode.

FOR A 6 CHANNEL REMOTE CONTROL:




Press and hold the **desired channel button** on the 6 channel remote control until the remote sounds **3 beeps** and the plug point LED flashes rapidly.

Release the remote control button and press and release the plug point button to exit the program mode.



FOR A 16 CHANNEL REMOTE CONTROL:

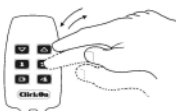

Select a channel of your choice on the remote control by pressing and releasing a channel key.




Press and hold the **UP** button on the 16 channel remote control until the remote sounds **3 beeps** and the plug point LED flashes rapidly.



Release the remote control button and press and release the plug point button to exit the program mode.

FOR A WALLMOUNT REMOTE CONTROL:

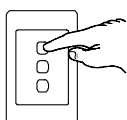

Press and hold the button on the wallmount remote control for 10 seconds. Check for a confirmation from the plug point (LED flashes at a faster rate).




Release the wallmount remote control button and press and release the plug point button to exit the program mode.

NOTE: The program mode on the plug point will automatically time out after 30 seconds if no programming commands are received.

DELETING REMOTE CONTROL CHANNELS FROM THE PLUG POINT

The Plug Point can store up to 24 different remote control channels. If the plug point fails to program any new channels, one or more of the existing channels need to be deleted.

Note: To delete a single remote control channel from the plug point, the original remote control device must be used. To delete all remote control channels from the plug point, any remote control can be used.

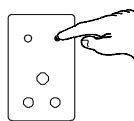

Place the plug point into the **programming mode** by pressing and holding the plug point button until the LED indicator starts flashing constantly. **Release the button.**

FOR A 64 CHANNEL REMOTE CONTROL:



Select the channel to be deleted on the remote control.



Press and hold the **OFF** button on the remote control until the remote sounds **3 beeps** and the plug point LED flashes rapidly.



Release the remote control button and press and release the plug point button to exit the program mode.

FOR A 6 CHANNEL REMOTE CONTROL:



Press and hold the **desired channel button** on the 6 channel remote control until the remote sounds **3 beeps**. **Keep holding** the remote control button until the remote sounds **another 4 beeps** and the plug point LED flashes rapidly again.



Release the remote control button and press and release the plug point button to exit the program mode.

FOR A 16 CHANNEL REMOTE CONTROL:



Select the channel to be deleted on the remote control.




Press and hold the **DOWN** button on the remote control until the remote sounds **3 beeps** and the plug point LED flashes rapidly.



Release the remote control button and press and release the plug point button to exit the program mode.

FOR A WALLMOUNT REMOTE CONTROL:

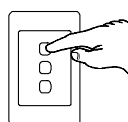

Press and hold the button on the wallmount remote control for 14 seconds. Check for a confirmation from the plug point (LED flashes at a faster rate).



Release the wallmount remote control and press and release the plug point button to exit the program mode.

DELETING ALL CHANNELS FROM THE PLUG POINT USING A 6, 16 OR 64 CHANNEL REMOTE:

Follow the steps for deleting a single channel but **keep holding the remote control button for another set of beeps**. Release the remote control button and press and release the plug point button to exit the program mode.