

CLICKON 16 CHANNEL KEYRING REMOTE CONTROL – CL-KEY-16






USER ASSIGNED ID'S

In addition to the unique identification code of the remote control, each ClickOn Keyring Remote Control can be programmed with a user selected 8 digit code. By default only channels 1 and 2 of each layer will transmit this user id while channels 3 and 4 of each layer remain in code hopping mode. On firmware revision V3.6 and later, uid can also be enabled on channels 3 and 4. When a channel with a user assigned code is programmed into a **ClickOn Gate Receiver**, the gate receiver will use this fixed **user assigned code** instead of the unique factory programmed ID of the remote control. By assigning the same code to different ClickOn Keyring Remote controls, multiple users (example in townhouse complexes) can access the same ClickOn Gate Receiver or Receivers. The code can be changed at any time for security purposes. The normal operation of the remote control(s) is not affected by this since any ClickOn Light Dimmers or Power Switches will still operate on the factory programmed ID of each remote control.




PROGRAMMING A USER ASSIGNED ID

Decide on a code consisting of 8 digits with each digit any number from 1 to 4 for example:






4 2 3 1 2 3 4 1

1. Press and hold both the  and  buttons simultaneously for at least 5 seconds. During this time the remote will sound a short burst of rapid beeps followed by a long burst of rapid beeps.
2. Release both buttons.
3. Enter the 8-digit code. A beep will sound after each number. After the last digit was entered, the remote control will sound a short burst of rapid beeps. No further digits will be accepted.
4. Press and hold the  button until the remote control sounds a short burst of rapid beeps (after approximately 5 seconds). The code is now programmed.
5. To **cancel and exit** the program mode at any stage, simply press and release  or . The mode also has an automatic timeout period of 10 seconds after any key was pressed. Reprogramming or programming a new code will replace the previous code.

DELETING THE USER ASSIGNED ID

1. Press and hold both the  and  buttons for at least 5 seconds. During this time the remote will sound a short burst of rapid beeps followed by a long burst of rapid beeps.
2. Release both buttons.
3. Next press and hold  until the remote sounds a short burst of rapid beeps (after approximately 5 seconds) Release the button. The user assigned ID is now deleted.

TO ENABLE OR DISABLE UID ON CHANNEL 3 AND 4 (V3.6 FIRMWARE ONLY)

1. Press and hold both the  and  buttons for at least 5 seconds. During this time the remote will sound a short burst of rapid beeps followed by a long burst of rapid beeps.
2. Release both buttons.
3. Press button  and  simultaneously. A single beep indicates that uid is disabled on channel 3 and 4 while a double indicates that uid is enabled on channel 3 and 4.
4. Press  to confirm.