

# ClickOn

## 6-Channel Keyring Remote Control



# ClickOn

## 6-Channel Keyring Remote Control Model: CL-KEY-06

### TYPICAL APPLICATIONS

- Remote control of any ClickOn Receiving Device
- Gate/Garage door Control
- Remote controlled lighting

### FEATURES

- Code hopping.
- Ideal for security complexes.
- No dip-switches.
- User-friendly programming.
- Compatible with all ClickOn devices.
- Provides ON, OFF and DIMMING control with ClickOn dimmers.
- Frequency: 433.92Mhz.
- Range: 30 to 100m.



6 009625 990547

Add security and comfort to your lifestyle

© 2006 ClickOn Technology (Pty) Ltd.  
<http://www.clickon.co.za>

### PROGRAMMING

1. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until it's LED starts flashing continuously. (See receiving device user manual for more information).

2.



Press and hold the DESIRED channel button on the Remote Control until the remote sounds 3 beeps (approx. 10 seconds). Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).

3. Exit the programming mode on the receiving device.

### REMOTE CONTROL FUNCTIONS

Keep in mind that these functions will be available only after successful programming (see **PROGRAMMING**).

#### To switch a device ON or OFF



Press and release the button on the Remote Control. The remote control will toggle between the **ON** and **OFF** commands each time the button is pressed.

#### To DIM a light (when used with a Light Dimmer)

Enter DIM/BRIGHT mode on the Remote control by pressing buttons 1 and 2 simultaneously.



Press and hold the appropriate button on the Remote Control to dim or brighten the light.

The Remote Control will exit the DIM/BRIGHT mode automatically if no buttons are pressed for 7 seconds.

A forced exit can be achieved by pressing buttons 1 and 2 simultaneously again.

## ADVANCED PROGRAMMING

### Delete

A Remote Control channel programmed into a ClickOn receiving device may be deleted from that device by following the procedure below:

1. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until the receiving device LED starts flashing continuously. (See receiving device user manual for more information).

2.



Press and hold the appropriate button on the remote control until the remote sounds **3 beeps followed by another set of 4 beeps**. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).



3. Exit the programming mode on the receiving device.

### Delete All

All remote control channels programmed into ANY ClickOn RECEIVING device can be deleted entirely by using any ClickOn Remote Control. The remote control used for this need not be one that was previously programmed into the device. This allows a lost or stolen remote control to be deleted before reprogramming the new remote control.

1. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until the receiving device LED starts flashing continuously. (See receiving device user manual for more information).

2.



Press and hold **any** button on the remote control until the remote sounds **3 beeps**, then **4 beeps** and then **5 beeps** (approximately 17 seconds). Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).



3. Exit the programming mode on the receiving device.

## KEYPAD LOCK FUNCTION

The keypad lock function can be used to prevent accidental remote control activation.

### Enabling the Keypad Lock Function

Before the keypad lock function can be used, it has to be enabled as follows:

Press and hold button 3 and 4 simultaneously until the remote sounds a burst of beeps (after approximately 5 seconds).

The keypad can now be locked and unlocked (see *Locking/Unlocking the Keypad*)

### Disabling the Keypad Lock Function

Press and hold button 3 and 4 simultaneously until the remote sounds a short beep (after approximately 5 seconds).

The keypad lock function is now disabled.

### Locking/Unlocking the Keypad

Lock or Unlock the Keypad on the Remote Control by pressing buttons 3 and 4 simultaneously. The Remote Control will sound a long beep when the Keypad is locked and any key is pressed on the remote control.

## BATTERY REPLACEMENT

If the remote control does not respond to any key presses or the LED fails to come on when a key is held in, the battery may need replacement.

The remote control uses one type **23A 12V** battery.

## WARRANTY

The manufacturer warrants that the product identified in this manual is free from defects in material or workmanship. This warranty is valid for a period of 12 months from date of purchase. The manufacturer, at its discretion, will repair or replace the defective product when returned to the manufacturer via the retailer of the system. In the event that no satisfaction can be obtained from the retailer of the system, only then can the manufacturer be approached directly by the final purchaser. The manufacturer shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of the use of the product. Improper use or mishandling of this product by the purchaser will render this warranty null and void. No warranty claims will be entertained without presentation of a valid invoice. The manufacturer will charge the purchaser for services rendered outside the warranty period. Any implied warranties in respect of this product are expressly excluded. No agreement whether implied or referred are binding, unless agreed to in writing by the manufacturer.