

ClickOn

64-Channel Remote Control

ClickOn


64-Channel Remote Control Model: EZE-RC-10

TYPICAL APPLICATIONS


- Remote control of any ClickOn Receiving Device
- Gate/Garage door Control
- Remote controlled lighting

FEATURES

- 64 Channels.
- 8 Code hopping channels for use with ClickOn Gate Receivers.
- Compatible with all ClickOn devices.
- Fully programmable - no dip-switches.
- Illuminated keypad for night time operation.
- Provides ON, OFF and DIMMING control with ClickOn dimmers.
- Frequency: 433.92Mhz.
- Range: 30 to 100m.
- Available in six different colours

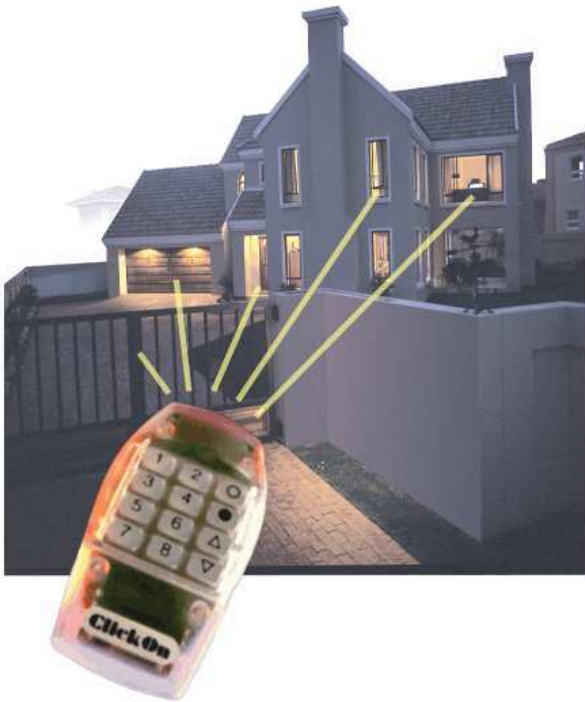

Add security and comfort to your lifestyle

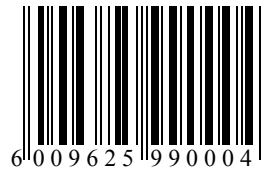


© 2003 ClickOn Technology (Pty) Ltd.
<http://www.clickon.co.za>

CHANNEL SELECTION


The remote control has 64 channels.

8 Layers x 8 Channels on each Layer = 64

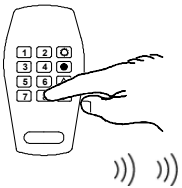

Select a **layer** number from 1 to 8 by **pressing and holding** the appropriate channel key (1 to 8) until the remote sounds 2 beeps.

Release the key.

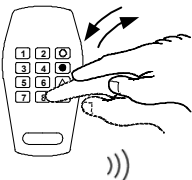

Now **press and release** the key for the desired **channel** on the selected layer.

Note: If a **layer is not selected**, then **layer 1** will be selected automatically.


After a channel was selected, that selection will remain active until another channel is selected i.e. all subsequent function operations will be done with the selected channel.

Code Hopping Channels:

Code hopping channels transmit a unique encrypted code with every transmission. This prevents code-grabbing devices to be used to gain unlawful entry.


All channels on **layer 8** are code hopping. Always select one of these channels when programming the remote control into a **ClickOn Gate Receiver**.


PROGRAMMING

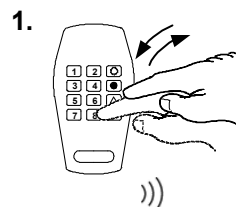

1. Select a channel of your choice on the remote control (see *CHANNEL SELECTION*).

2. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until it's LED starts flashing continuously. (See receiving device user manual for more information).

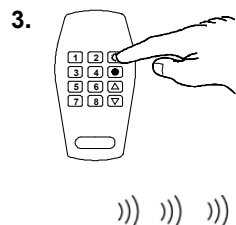

3. Press and hold the  button on the remote control until the remote sounds 3 beeps. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).

4. Exit the programming mode on the receiving device.

BATTERY REPLACEMENT


If the remote control does not respond to any key presses or the LED backlighting fails to come on, the battery may need replacement.


The remote control uses one type **23A 12V** battery.


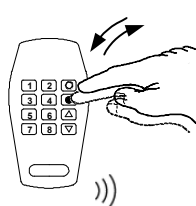
REMOTE CONTROL FUNCTIONS


Keep in mind that these functions will be available only after successful programming (see **PROGRAMMING**).

To switch a device ON or OFF:

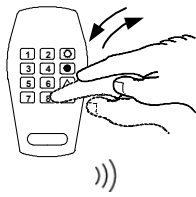
- 


1. Select the appropriate channel on the remote control.
- 


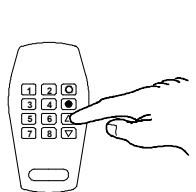
2. Press and release the  button to switch **ON**.
- 


3. Press and release the  button to switch **OFF**.

To DIM a light (when used with a Light Dimmer)

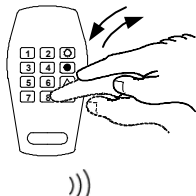- 

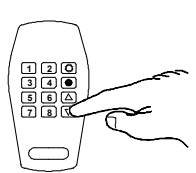1. Select the appropriate channel on the remote control.
- 

2. Press and hold the  button to DECREASE the light level.
- 

3. Press and hold the  button to INCREASE the light level.

Light Dimmer Functions

To RESTORE to the previous light intensity when the light is switched OFF:

Press and release the  button while the light is off.

To switch the light on at minimum intensity when the light is switched OFF:

Press and release the  button while the light is off.


To switch the light on at 50% intensity:


Press and release the  and  buttons simultaneously.


ADVANCED PROGRAMMING

Delete

A single remote control channel programmed into a ClickOn Receiving Device can be deleted from that device without affecting any other channels programmed into the device.

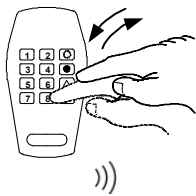
- 

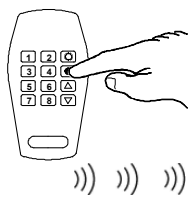
1. Select the **channel to be deleted**. (see **CHANNEL SELECTION**)
2. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until it's LED starts flashing continuously. (See receiving device user manual for more information).
- 

3. Press and hold the  button on the remote control until the remote sounds **3 beeps**. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).
4. Exit the programming mode on the receiving device.

Delete All

All remote control channels programmed into a ClickOn Receiving Device can be deleted entirely by using **any** ClickOn Remote Control. The remote control used for this need not be one that was previously programmed into the device.

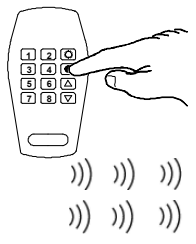1. Select any channel on the remote control (for a gate receiver select any channel on layer 8).
2. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until it's LED starts flashing continuously. (See receiving device user manual for more information).
- 

3. Press and hold the  button on the remote control for at least 10 seconds. During this process the remote will sound 3 beeps followed by another 4 beeps. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).
4. Exit the programming mode on the receiving device.

WARRANTY

The manufacturer warrants that the product identified in this manual is free from defects in material or workmanship. This warranty is valid for a period of 12 months from date of purchase. The manufacturer, at its discretion, will repair or replace the defective product when returned to the manufacturer via the retailer of the system. In the event that no satisfaction can be obtained from the retailer of the system, only then can the manufacturer be approached directly by the final purchaser. The manufacturer shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of the use of the product. Improper use or mishandling of this product by the purchaser will render this warranty null and void. No warranty claims will be entertained without presentation of a valid invoice. The manufacturer will charge the purchaser for services rendered outside the warranty period. Any implied warranties in respect of this product are expressly excluded. No agreement whether implied or referred are binding, unless agreed to in writing by the manufacturer.