

ClickOn

RF Repeater CL-RPT-10



For extending the radio remote control range of all ClickOn devices.

Programmable, with up to 30 different remote controls



SPECIFICATIONS

- Model: CL-RPT-10
- Supply: 12V to 16VDC / AC
(AC/DC Adaptor available separately)
- Supply current: 50mA max.
- Receive range: Up to 100m
- Transmit range: Up to 100m

www.clickon.co.za

INSTALLATION

- For optimal remote control range, keep the Repeater at least 1m away from other ClickOn receiving devices.
- Connect the wires from the AC/DC Adaptor to the terminals at the bottom of the Repeater observing the correct polarity of the + and - wires.
- Mount the repeater with the antenna in an upright position and away from any metal objects.

WARRANTY AND DISCLAIMER

The manufacturer warrants that the product identified in this manual is free from defects in material or workmanship. This warranty is valid for a period of 12 months from date of purchase. The manufacturer, at its discretion, will repair or replace the defective product when returned to the manufacturer via the retailer of the system. In the event that no satisfaction can be obtained from the retailer of the system, only then can the manufacturer be approached directly by the final purchaser. The manufacturer shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of the use of the product. Improper use or mishandling of this product by the purchaser will render this warranty null and void. No warranty claims will be entertained without presentation of a valid invoice. The manufacturer will charge the purchaser for services rendered outside the warranty period. Any implied warranties in respect of this product are expressly excluded. No agreement whether implied or referred are binding, unless agreed to in writing by the manufacturer.

OPERATION

The RF Repeater will repeat all ClickOn commands except dimming and programming (add/delete) commands.

LED INDICATOR

GREEN: Power ON
FLASHING RED: Busy repeating commands
FLASHING AMBER: Program mode active

MODES OF OPERATION

Mode 1 (Factory default): The repeater will repeat all remote control channels from ANY ClickOn remote control device.

Mode 2: The repeater will only repeat commands from remote controls programmed into the repeater. Up to 30 different remote controls can be programmed into the repeater.

MODE SELECTION

Programming any ClickOn Remote Control into the repeater, will automatically set the repeater to **Mode 2**. Once a remote control has been added, all channels for that remote control will be repeated.

To restore the repeater to **Mode 1**, perform a **DELETE ALL** using any ClickOn Remote Control.

A single remote control can be removed (deleted) from the repeater without affecting other remotes already programmed into the repeater.

ADDING/DELETING REMOTE CONTROLS

Will automatically set the repeater to **Mode 2**.

1. Enter the programming mode by pressing and holding the button on the side of the repeater until the LED indicator starts flashing AMBER. Release the button.
2. Execute an ADD or DELETE command from the selected remote control using any channel on the remote control (*see remote control instruction manual for more information*).
3. The LED indicator on the repeater will flash at a faster rate to confirm success.
4. Exit the programming mode by pressing and releasing the button on the repeater.

DELETING ALL REMOTE CONTROLS

Will automatically set the repeater to **Mode 1**.

1. Enter the programming mode by pressing and holding the button on the side of the repeater until the LED indicator starts flashing AMBER. Release the button.
2. Execute a DELETE ALL command from any ClickOn remote control using any channel on the remote control (*see remote control instruction manual for more information*).
3. The LED indicator on the repeater will flash at a faster rate to confirm success.
4. Exit the programming mode by pressing and releasing the button on the repeater.