 


# ClickOn

## 3-Channel Wall-mount Remote Control

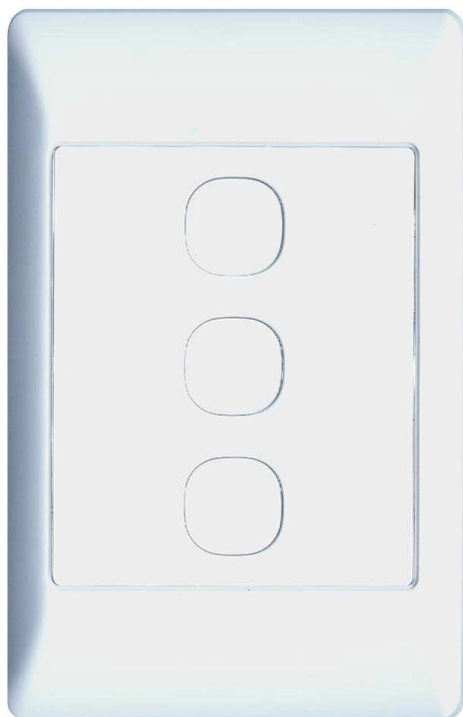

Add security and comfort to your lifestyle

# ClickOn

## 3-Channel Wall-mount Remote Control Model: CL-WBT-103

### TYPICAL APPLICATIONS

- Remote control of any ClickOn Receiving Device
- Multi-way Switching
- Panic Buttons
- Gate/Garage door Control

### FEATURES

- No wiring required.
- Code-hopping for secure gate/garage door control.
- Mode Indicator
- Battery operated
- Battery Low indication

 


© 2002 ClickOn Technology (Pty) Ltd.  
<http://www.clickon.co.za>

### PROGRAMMING

1. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until it's LED starts flashing continuously. (See receiving device user manual for more information).

2.

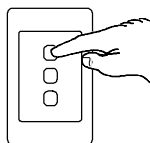

Press and hold the appropriate button on the Wall-mount Remote Control for exactly 10 seconds before releasing it. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).

4. Exit the programming mode on the receiving device. (See receiving device user manual for more information).

### INSTALLATION

 
Before installing the Wall-mount Remote Control, PROGRAM the Wall-mount Remote Control into the target ClickOn receiving device. Programming is still possible after installation, but might require the co-operation of two people if the receiving device is situated far away from the Wall-mount Remote Control.

The Wall-mount Remote Control does NOT require ANY wiring. It is a self-contained, battery-operated unit.

### FUNCTIONS


Keep in mind that these functions will be available only after successful programming.

#### To switch a device ON or OFF

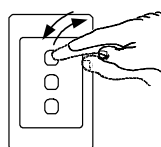

Press and release the appropriate button on the Wall-mount Remote Control.

#### To DIM a light (when used with a ClickOn Light Dimmer)

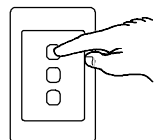 

Press and hold the appropriate button on the Wall-mount Remote Control.

#### To RESTORE to a previous light intensity when the light is switched OFF (Light Dimmer only)

Simply press and hold the appropriate button on the Wall-mount Remote Control. Release the button as soon as the light turns on.

## OPERATIONAL MODES

The Wall-mount Remote Control has two modes of operation:

### TOGGLE MODE (factory default)

In this mode, the LED indicator on the Wall-mount Remote Control flashes 3 times when a button is pressed and released.

Every time a button on the Wall-mount Remote Control is pressed and released, it instructs the receiving device to change its state. So if the receiving device had been ON, it would now switch OFF or vice versa.

### ON/OFF MODE

 
In this mode, the LED indicator either flashes once or twice when a button is pressed and released.

One flash indicates that the receiving device will be instructed to switch ON, regardless of its current state.

Two flashes indicate that the receiving device will be instructed to switch OFF, regardless of its current state.

## CHANGING THE OPERATIONAL MODE

Each channel (button) of the Wall-mount Remote Control may be configured independently for either TOGGLE or ON/OFF mode.

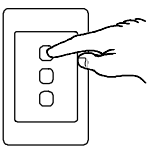

Press and hold the appropriate channel button on the Wall-mount Remote Control until the indicator LED turns on without flashing. (this operation takes approximately 20 seconds). Release the button.

Press and release the button three times rapidly while the LED is ON.

If the Wall-mount Remote Control channel was in TOGGLE mode, it will change to the ON/OFF mode.


If the Wall-mount Remote Control channel was in the ON/OFF mode, it will change to TOGGLE mode.

## ADVANCED PROGRAMMING

 A Wall-mount Remote Control channel programmed into a ClickOn receiving device may be deleted from that device by following the procedure below:

1. Place the receiving device into the programming mode. This is normally done by pressing and holding the button on the receiving device until the receiving device LED starts flashing continuously. (See receiving device user manual for more information).

2.

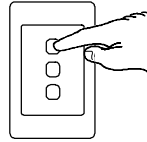

Press and hold the appropriate button on the Wall-mount Remote Control for exactly 14 seconds before releasing it. Check for a confirmation signal from the receiving device. (See receiving device user manual for more information).

4. Exit the programming mode on the receiving device. (See receiving device user manual for more information).

## BATTERY REPLACEMENT

When the indicator LED does not function when a button is pressed, the battery needs to be replaced.

The Wall-mount Remote Control uses a type **23A 12V** battery.

The battery is situated on the backside of the unit, and is only accessible after removing the cover plate and Wall-mount Remote Control from the wall.

When replacing the old battery with a new one, please be attentive to the **polarity** indicators visible on the printed circuit board next to the battery housing.

## WARRANTY

The manufacturer warrants that the product identified in this manual is free from defects in material or workmanship. This warranty is valid for a period of 12 months from date of purchase. The manufacturer, at its discretion, will repair or replace the defective product when returned to the manufacturer via the retailer of the system. In the event that no satisfaction can be obtained from the retailer of the system, only then can the manufacturer be approached directly by the final purchaser. The manufacturer shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of the use of the product. Improper use or mishandling of this product by the purchaser will render this warranty null and void. No warranty claims will be entertained without presentation of a valid invoice. The manufacturer will charge the purchaser for services rendered outside the warranty period. Any implied warranties in respect of this product are expressly excluded. No agreement whether implied or referred are binding, unless agreed to in writing by the manufacturer.